




URNEX® TRAINING

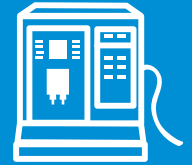


RINZA® TABLETS

INSTRUCTIONS FOR DAILY USE:

AUTOMATIC MILK FROTHER

1. MIX SOLUTION OF 1 RINZA® TABLET PER 250 ML OF WARM WATER.
2. INSERT SUCTION TUBE INTO SOLUTION. RUN ENTIRE SOLUTION THROUGH FROTHER.
3. REPEAT ABOVE WITH CLEAN COLD WATER TO THOROUGHLY RINSE ALL COMPONENTS.

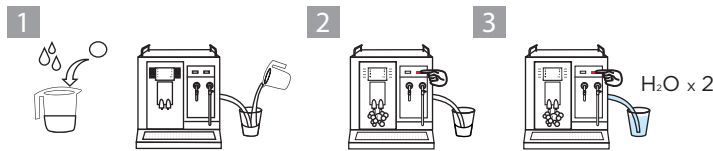


1 RINZA® TABLET PER 1 L H₂O

INSTRUCTIONS FOR DAILY USE:

STEAM WANDS

1. CREATE SOLUTION OF 1 RINZA® TABLET PER 250 ML WARM WATER.
2. SOAK PARTS OR STEAM WAND FOR 15-30 MINUTES IN SOLUTION.
3. RINSE ALL COMPONENTS.

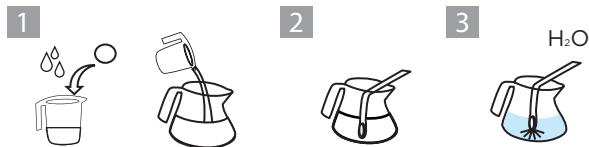

1 RINZA® TABLET PER 250 ML H₂O



URNEX BRANDS, INC

SPECIALIZED EQUIPMENT CLEANERS SINCE 1936

700 EXECUTIVE BLVD ELMSFORD, NY 10523 • TEL 914.963.2042 • FAX 914.963.2145

www.urnex.com