




# URNEX® TRAINING




## RINZA® MILK FROTHER CLEANER

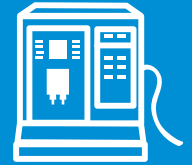

### INSTRUCTIONS FOR DAILY USE:

#### AUTOMATIC MILK FROTHER

1. MIX SOLUTION OF 30 ML RINZA® MILK FROTHER CLEANER PER 500 ML COLD WATER.
2. INSERT SUCTION TUBE INTO SOLUTION. RUN ENTIRE SOLUTION THROUGH FROTHER.
3. REPEAT ABOVE WITH CLEAN COLD WATER TO THOROUGHLY RINSE ALL COMPONENTS.

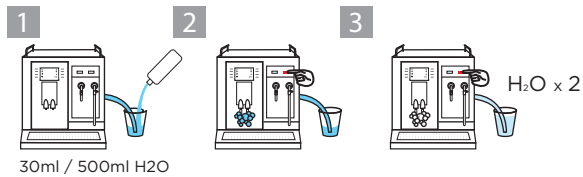

### INSTRUCTIONS FOR DAILY USE:

#### STEAM WANDS

1. CREATE SOLUTION OF 30 ML RINZA® MILK FROTHER CLEANER PER 500 ML WARM WATER.
2. SOAK PARTS OR STEAM WAND FOR 15-30 MINUTES IN SOLUTION.
3. RINSE ALL COMPONENTS.



## URNEX BRANDS, INC

SPECIALIZED EQUIPMENT CLEANERS SINCE 1936

700 EXECUTIVE BLVD ELMSFORD, NY 10523 • TEL 914.963.2042 • FAX 914.963.2145

[www.urnex.com](http://www.urnex.com)